

# LED FLOOD LIGHT

# Instruction Manual

# WARRANTY

- 5-year warranty replacement warranty will be provided during the warranty period if the lamp suffers quality problems.
- 2. During the warranty period, the customer shall return the damaged goods or failed parts for inspection and repair by Goldenlux. Goldenlux will then send the fixed or new parts back.
- A replacement warranty will be provided once valid documents are presented.

#### The following circumstances will not receive replacement warranty:

- (1) Damage caused, including, but not limited to, damage from abnormal working conditions, improper usage, storage that does not conform to the instruction manual
- (2) Dismantling, modification or improper installation or repairing of the products without Goldenlux's authorization;
- 3 Damages caused by environmental circumstances including, but not limited to, fire, flood, lighting strike, earthquake.



## WARNING

### To avoid the risk of fire, explosion, or electric shock:

This product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes. Verify that the power wire is installed correctly following the guidelines set forth by the applicable electrical codes.

#### To avoid electric shock:

- · Be certain electrical power is OFF before and during installation and maintenance.
- · Luminaires must be supplied by a wiring system suitable per local code with an equipment grounding conductor.

## To avoid burning hands:

• Before to performing maintenance, ensure Luminaire is allowed to cool after poweing off for a period of 10 minutes.

 
## To avoid product degradation:

- · Do not operate in ambient temperatures above those indicated on the luminaire date sheet.
- Use proper supply wiring as specified on the luminaire data sheet
- · Avoid use in environments containing sulfur, chlorine or other halides, methyl acetate or ethyl acetate, cyanoacrylates, glycol ethers, formaldehyde, or butadiene.
- Mount luminaire no less than 36 inches from the ceiling.
- · Make sure the supply voltage is within the voltage range stated on the date sheet.
- Use only replacement parts from Goldenlux.
- · Aircraft cable mounting is recommended for dry locations only.
- · Use only Goldenlux or equivalent parts for mounting luminaire



# **MOUNTING**

# PENDANT EYEBOLT MOUNTING



Put the expansion screw into the wall.




Fasten the lamp on the wall-



Wire according to the diagram  $\circ$ 






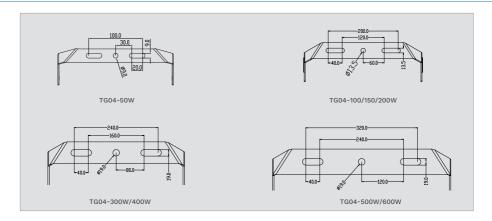

## **CEILING MOUNTING:**



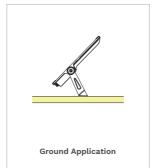



# REFER TO THE WIRING DIAGRAM TO MAKE ELECTRICAL CONNECTIONS

