

Instruction Manual

Linear High Bay



WARRANTY

1. A 5-year replacement warranty will be provided during the warranty period if the lamp experiences any quality issues.
2. During the warranty period, the customer is required to return the damaged goods or failed parts to Manufacturer for inspection and repair. Once repaired, Manufacturer will send back the fixed or new parts to the customer.
3. A replacement warranty will be provided once valid documents are presented.

The following circumstances will not receive replacement warranty:

- ① The warranty does not cover damages caused by abnormal working conditions, improper usage, or storage that does not conform to the instruction manual, among other possible causes.
- ② Dismantling, modification or improper installation or repairing of the products without Manufacturer's authorization;
- ③ No valid documents;
- ④ Damages caused by environmental circumstances including, but not limited to, fire, flood, lightning strike, earthquake.



WARNING

To avoid the risk of fire, explosion, or electric shock:

This product should only be installed, inspected, and maintained by a qualified electrician in accordance with all relevant electrical codes. Please verify that the power wire installation adheres to the applicable electrical codes.

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaires must be supplied by a wiring system suitable per local code with an equipment grounding conductor.

To avoid burning hands:

- Before performing any maintenance, ensure that the luminaire is allowed to cool for a period of 10 minutes after powering it off.

To avoid product degradation:

- Do not operate in ambient temperatures above those indicated on the luminaire data sheet.
- Use proper supply wiring as specified on the luminaire data sheet.
- Avoid using the luminaire in environments that contain sulfur, chlorine, or other halides, methyl acetate, ethyl acetate, cyanoacrylates, glycol ethers, formaldehyde, or butadiene.
- Mount luminaire no less than 36 inches from the ceiling.
- Make sure the supply voltage is within the voltage range stated on the data sheet.
- Use only replacement parts from Manufacturer.
- Aircraft cable mounting is recommended for dry locations only.
- Use only Manufacturer or equivalent parts for mounting luminaire.




MOUNTING

INSTALLATION OF LAMP POST


STEP 1

Use a wrench to tighten the screws of the rod-shaped bracket to the lamp body.

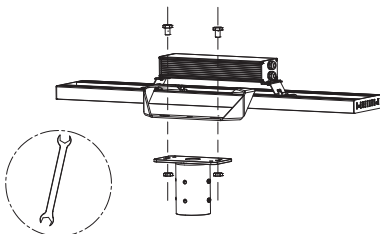


STEP 2

Fix the lamp body with the bracket installed onto the cylinder to be installed using an Allen wrench, and the installation is complete.

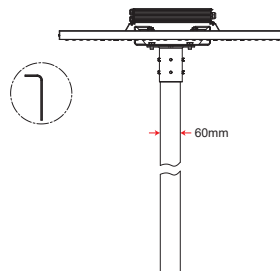

REFER TO THE WIRING DIAGRAM TO MAKE ELECTRICAL CONNECTIONS

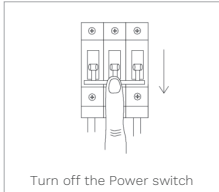

Connecting the cable requires an IP65 Tightness level



CE



UL

